

# BEWARD

## STS-01HPv2 IEEE 802.3af PoE Splitter User Manual

### Package Content

- PoE Splitter 1PC
- LAN cable 1PC
- DC Jack cord 1PC with  
4 types of Jack for network device



### Installation Steps

1. Set the correct voltage (5V or 9V or 12V) (default 5V) via voltage selector on the side of PoE splitter.
2. Connect “Power+Data” port on the splitter with PoE Ethernet cable, make sure “Power” LED of splitter is on.
3. Connect “Power OUT” cable on Splitter to power jack of the network device and connect “Data OUT” cable on Splitter to RJ45 port of network device.
4. Check whether the network device is on. If not, please make sure that power is on for Injector and Splitter, and all cables are connected correctly.
5. During setup, the terminal unit can be set to power up any compatible 5V/9V/12V Ethernet-enabled device via the voltage selector located on the side.

